

Instructions

GM 4L60




Part No. 77968

NOTE: Not compatible with early '82-'90 aluminum sleeve units.

Reamer



WARNING: Required reamer 77968-RM is no longer in production. Check with your distributor for availability.

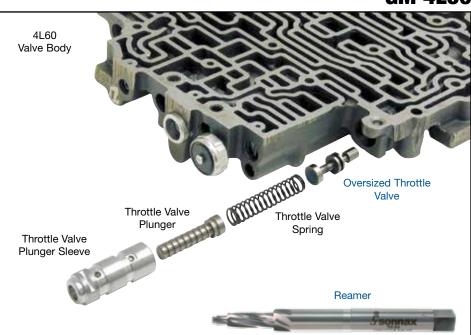

1. Disassembly

- a. Remove the two spring pins from the valve body and set aside for reuse.
- b. Remove OE throttle valve plunger sleeve, plunger and spring, setting aside for reuse.
- c. Remove and discard OE throttle valve.

2. Bore Reaming

Ream throttle valve bore (for reaming instructions/reamer care, please visit www.sonnax.com). Sonnax reamer **77968-RM** is required for this operation.

3. Installation & Assembly

- a. Install Sonnax oversized throttle valve. Ensure throttle valve can move freely in the newly reamed bore.
- b. Reinstall the OE throttle valve spring, throttle valve plunger sleeve and valve.
- c. Reinstall the two OE spring pins to the valve body.

4. Final Testing

Vacuum testing at the port(s) indicated holds the recommended minimum 18 in-Hg.

