

### Instructions

# **Oversized Lineto-Lube Pressure Regulator Valve Kit**

### Part No. 36424-16K

- Pressure Regulator Valve
- Boost Valve Assembly
- Outer Spring
- O-Rings (3)

#### Patent No. 6,826,908

**NOTE:** Fits Ford E4OD and 4R100 with F1, F5, F8 and E9 stamped pump castings.


1 Extra



## Part No. F-36424-TL16C

- Carbide Reamer
- Reamer Jig
- Guide Pin

**NOTE:** Sonnax "F-Tool" kits designed to service a specific bore require the VB-FIX, a self-aligning valve body reaming fixture. More information and instructions can be found online at www.sonnax.com.

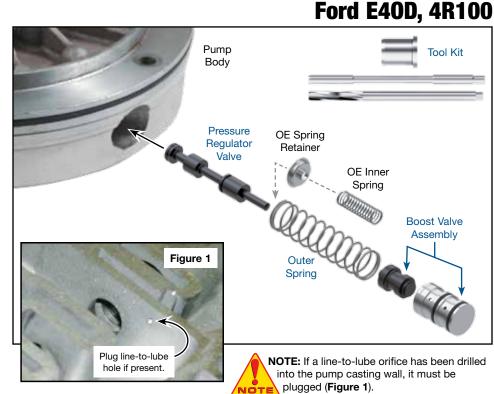

### 1. Disassembly

- a. Remove and discard the OE boost valve assembly, outer (large) spring and pressure regulator valve.
- b. Remove and save the OE retainer clip, inner (small) spring and the spring retainer for reuse.

### 2. Bore Preparation

Ream pressure regulator bore (for reaming instructions/reamer care, please visit www.sonnax.com). Sonnax reaming tool kit **F-36424-TL16C** and **VB-FIX** are required for this operation.

### 3. Installation & Assembly

- a. Thoroughly clear bore valve bore and pump body of all debris.
- b. Install Sonnax pressure regulator valve.
- c. Reinstall OE spring retainer (large washer) and small inner spring.
- d. Install Sonnax large outer spring.
- e. Install O-rings on Sonnax boost sleeve. Lubricate and roll on clean bench to size O-rings into grooves.
- f. Install Sonnax boost valve/sleeve assembly and secure with OE retainer.

©2015 Sonnax Industries, Inc.