Instructions

Solenoid Modulator Valve Kit

Part No. 57917E-13K

- Valve
- Sleeve
- Spring


Tool Kit

Part No. FIXTUE REQUIRED FROM PROPERTY FROM PROPERTY FOR THE PROPERTY FOR THE PROPERTY FROM PROPERTY FOR THE PROPERTY FOR THE

- Reamer
- Reamer Jig
- Guide Pin

NOTE: Sonnax "F-Tool" kits designed to service a specific bore require the VB-FIX, a self-aligning valve body reaming fixture. More information and instructions can be found online at www.sonnax.com.

Toyota/Lexus U140E, U140F, U240E, U241E

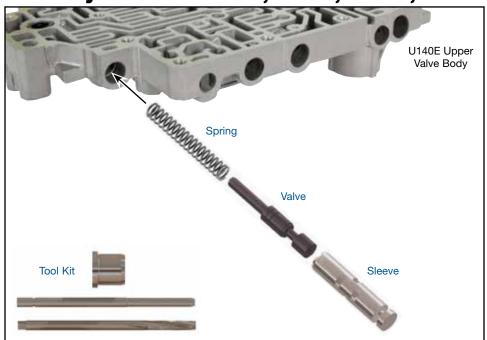

1. Disassembly

 
- a. Remove and discard OE end plug, valve and spring.
- b. Keep OE retainer for reuse.

2. Bore Reaming

Ream solenoid modulator bore (for reaming instructions/reamer care, please visit www.sonnax.com). Sonnax reaming tool kit **F-57917E-TL13** and **VB-FIX** are required for this operation.

3. Installation & Assembly

- a. Be certain all debris has been removed from the valve bore and valve body.
- b. Place Sonnax spring over the long stem on Sonnax valve, then push the Sonnax spring and valve assembly into Sonnax sleeve.
- d. Insert Sonnax assembly into bore, spring end first as shown above.



e. Reinstall OE retainer into the sleeve groove.

4. Final Testing

Vacuum testing at the port indicated holds the recommended minimum 18 in-Hg.

