Instructions

# Master Overlap Control Valve Sleeve Kit

## Part No. 68942-05K


• Sleeve 1-2, 4-5 Overlap

 
• Sleeve 2-3 Overlap


• Sleeve 3-4 Overlap

• O-Rings (3)

**NOTE:** Each of these Sonnax sleeves are also sold separately. Please visit www.sonnax.com for more details.

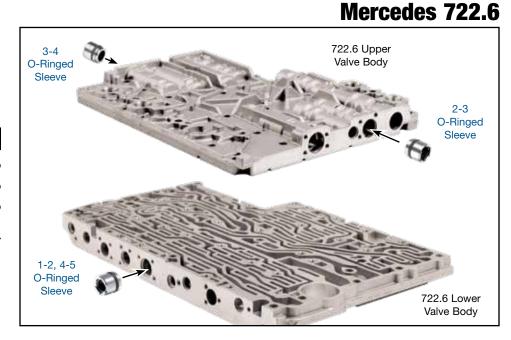



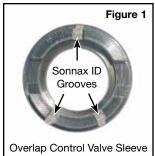

OE Spring	Free Length	Spring Load	Sonnax ID Grooves
1-2, 4-5 Overlap	.817"	1.5 lbs.	1
2-3 Overlap	.654"	11.4 oz.	2
3-4 Overlap	.790"	1.2 lbs.	3

#### 1. Disassembly

- a. Remove OE screws and end plate, saving for reuse.
- b. Remove OE spring and plunger valve, saving for reuse.
- c. Remove and discard OE sleeve.

### 2. Installation & Assembly

- a. Install Sonnax O-ring into shallow groove of Sonnax sleeve and roll on bench to size. Lubricate sleeve and O-ring.
- b. Install correct OE spring into plunger valve spring pocket, referencing chart. Slide plunger valve into sleeve, with spring facing grooved end face of Sonnax sleeve.
- c. Slowly install Sonnax sleeve assembly into valve body bore, taking care not to shear O-ring. Ensure sleeve end face grooves are outward.

#### 3. Final Testing

Vacuum testing at the port(s) indicated holds the recommended minimum 18 in-Hg.

