

HIGH PERFORMANCE TRANSMISSION PARTS

Instructions

## **Powerglide**

### **Oil Pan Kit**

# Part No. 28801-S

- Oil Pan
- Reducing Bushing 1/2" NPT Male to 1/8" NPT Female
- Magnetic Drain Plug, 1/2"- 20 w/Sealing Washer
- Pipe Plug 1/8" NPT

NOTE: Oil Capacity is approx. two additional quarts of transmission fluid. Ensure extra oil is added beyond original transmission capacity to achieve the proper oil level.

#### Required:





#### **Oil Temperature Sender Port Set-Up**

There are three different setup options for the oil temperature sender port on the **28801-S** Powerglide oil pan.

#### • Setup Option 1: 1/8" NPT Temperature Sending Unit

- 1. Insert Sonnax reducing bushing into 1/2" NPT port in Sonnax oil pan.
- 2. Insert sending unit into 1/8" NPT port in Sonnax reducing bushing.

#### • Setup Option 2: 1/2" NPT Temperature Sending Unit

Insert sending unit into 1/2" NPT port in Sonnax oil pan.
NOTE: Sonnax reducing bushing is not required with this setup.

#### • Setup Option 3: No Temperature Sending Unit

- 1. Insert Sonnax reducing bushing into 1/2" NPT port in Sonnax oil pan.
- 2. Insert Sonnax pipe plug into 1/8" NPT port in Sonnax reducing bushing.